




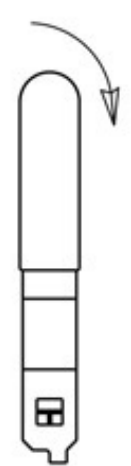
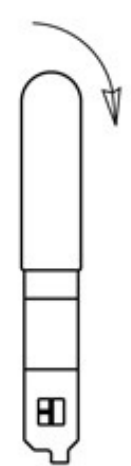


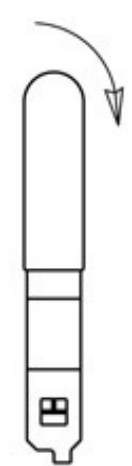

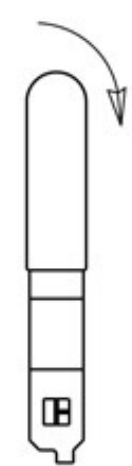

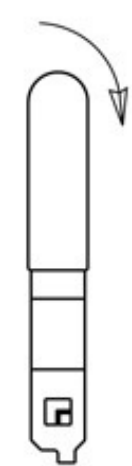

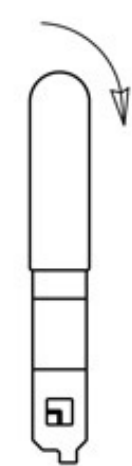

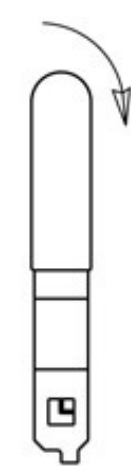





FLOW PATH VARIATIONS

	231-T				231-L		
	A	B	C	D	A	B	C
Lever Assembly							
Position 1							
Position 2							
Note	<p>To achieve other flow paths, simply remove the handle and reorient the valve stem to the desired flow path. Refer to the markings on top of the ball valve stem for proper position. When finished, re-attach the handle.</p>						